


## Crimping dies OR

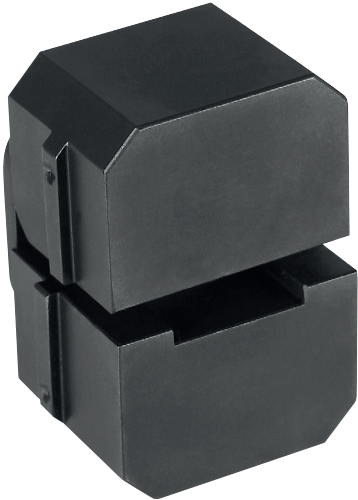


For end forming Al sector conductors without use of terminals.  
Flat forms conductors of  $25 \div 120 \text{ mm}^2$ . After flat forming,  
a hole should be punched using OK dies.

### Dedicated tools


---



PR 240

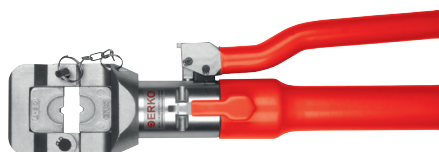

HR 300

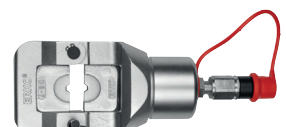

GO 300