

## Crimping dies UR



For end forming Al sector conductors without use of terminals.  
Flat forms conductors of  $25 \div 120 \text{ mm}^2$ . After flat forming,  
a hole should be punched using UK dies.


### Terminals and connectors

---



### Dedicated tools

---

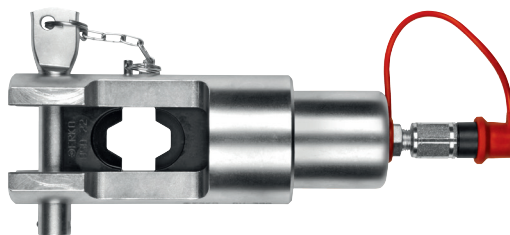

GU 300